# NC-FSK Wire Splice Kit
# Quick Start Guide

## Easy Inline 3-Wire Splice Connection with NextSeal™ Waterproof Technology

1) Insert stripped wire-ends into connector and secure.

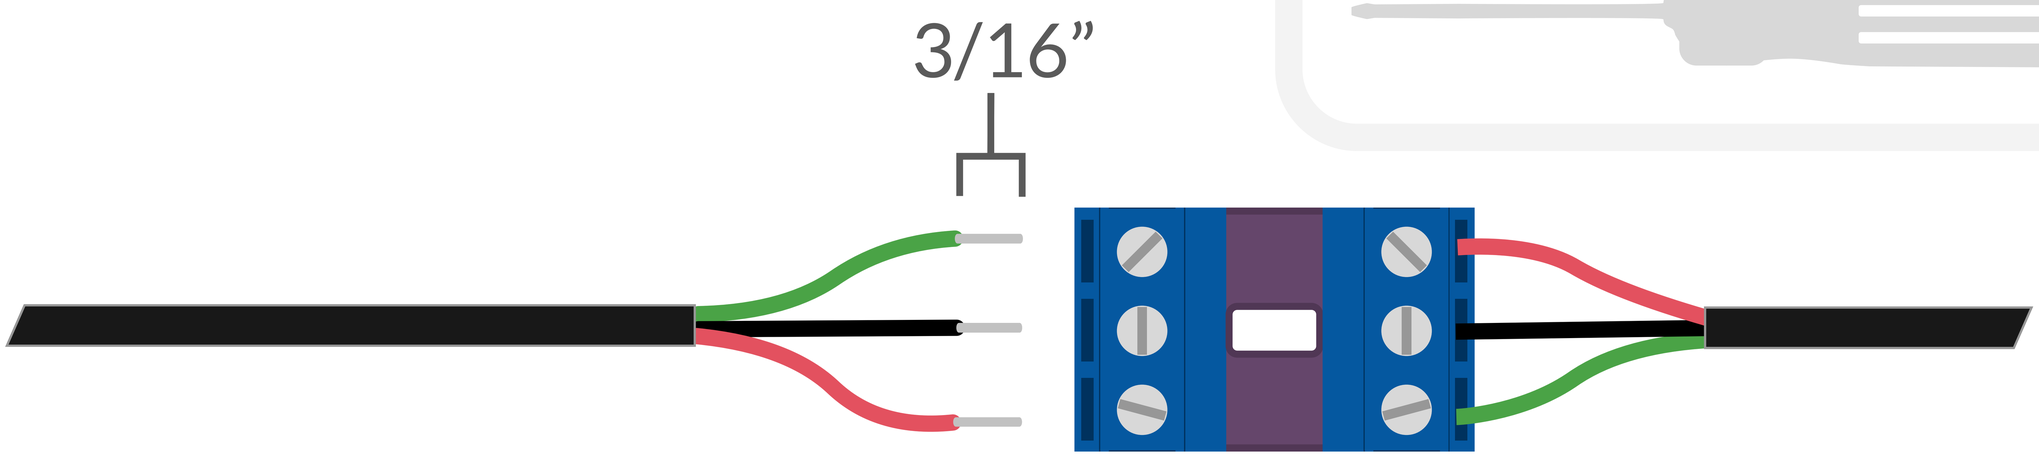


2) Place connector on center post and align cables into groves.

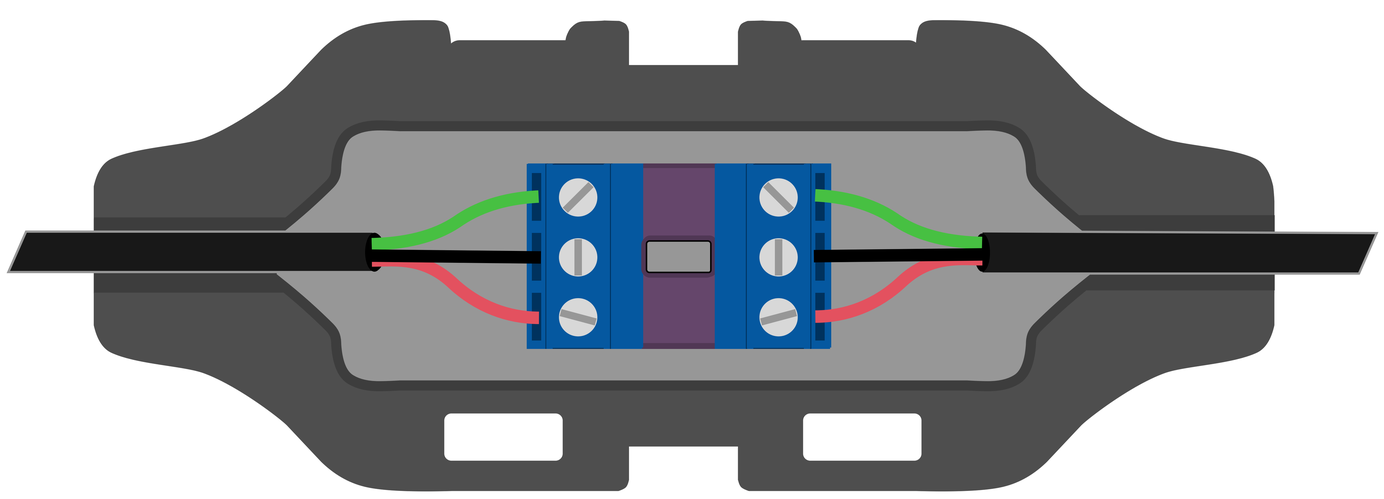

3) Align the top and bottom halves and press together.

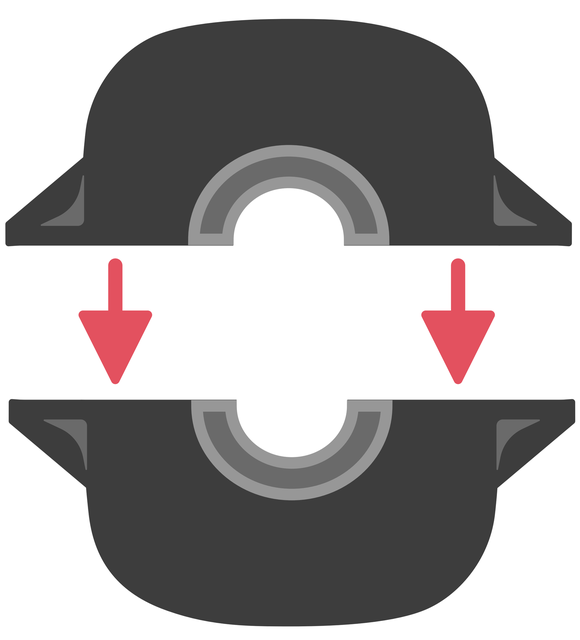
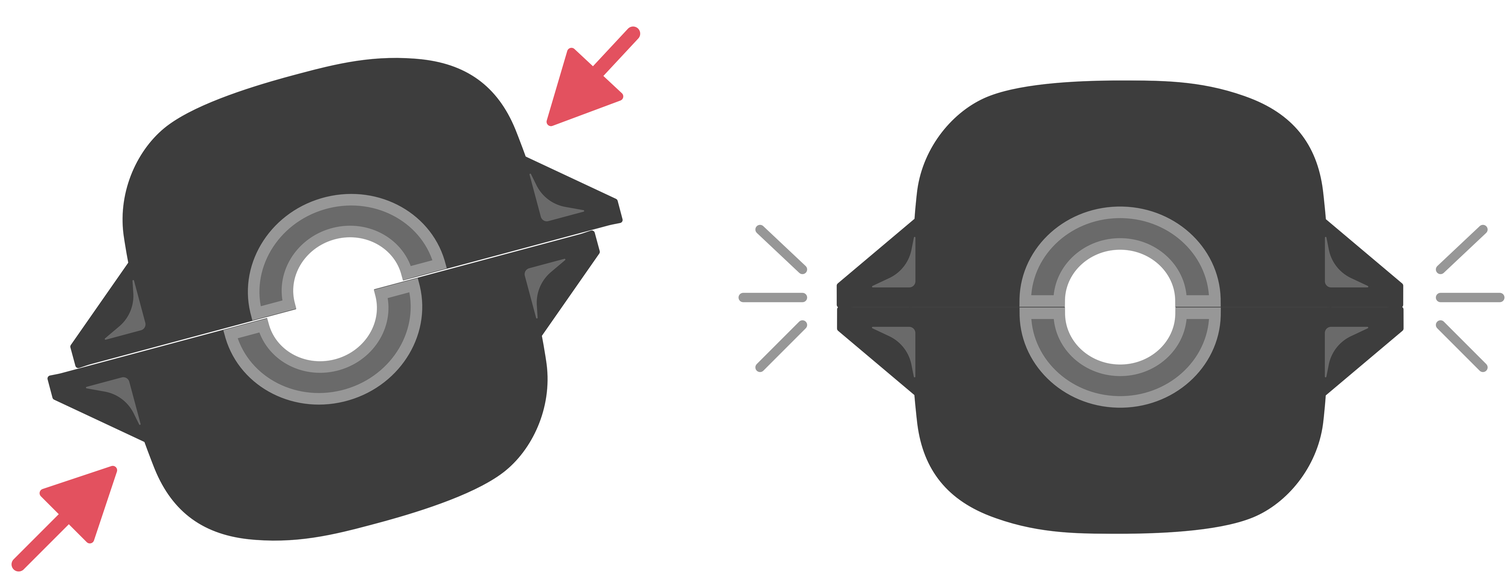
4) Ensure all clips are engaged and apply angled pressure as needed.